12” LED PIANO DESK LAMP WITH DIMMER (DLED12MBD)
USER MANUAL

Rev. (03/15)

Congratulations on purchasing your new quality lighting fixture from Cocoweb.com, Inc. If you have any questions about these instructions or are missing any parts, please call us at 888-783-0378 or visit our website at www.cocoweb.com.

WARNING

Make sure the light toggle switch is in the OFF position before plugging in the piano lamp to the wall outlet. Use the toggle switch on the lighting fixture or a properly installed wall switch to toggle the piano lamp ON and OFF. Plugging and unplugging the power adapter to toggle the lamp ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

PACKAGE CONTENTS:
- 12 inch Piano Lamp
- 24V 0.5A DC Power Adapter
- Dimming Controller

IMPORTANT SAFETY INSTRUCTIONS:
- Do not place near any extreme heat or in directsunlight.
- Place on an even and secure surface.
- Use only the supplied power adapter.
- Do not use with damaged electrical cords.
- Keep the lamp dry and clean.
- Never overload electrical circuits as it may cause electrical shock or fire.
- For use in indoor dry rooms only. Not suitable for damp rooms.
- Do not look directly into the light source.

SPECIFICATIONS:
- One-point adjustable height
- 12” swivelable lamp shade
- Natural light LED array pre-installed
- Light array contains 12 evenly spaced LED nodes
- Toggle on/off switch located on the lamp shade
- LED lifespan: 50,000 hours
- Color Temperature: 2700 K
- Power Usage: Less than 10 watts
- Electrical cord: 9.5 feet long
- UV and infrared-free LED Technology
- Universal 24v 0.5A DC power adapter

CARE INSTRUCTIONS:
DO NOT use abrasive or chemical cleaners to clean the piano lamp as it may damage the finish. Use only warm water, then wipe dry with a clean soft cloth.

LED ARRAY REPLACEMENT:
The LED array is rated to last 50,000 hours. Should the LED bulbs cease to function in the warranty period, Cocoweb will replace the LED array free of charge. Cocoweb may at its choice, send a replacement LED array or request for the whole lamp to be shipped to a Cocoweb location or authorized dealer. Shipping and handling charges may be incurred. After the 2 year warranty period, you may purchase a replacement LED array by contacting Cocoweb customer service.

TROUBLESHOOTING AND REPAIR:
Should the lamp stop working properly and/or one of the following problems occur: (1) The lamp fails to turn on (2) The lamp flickers (3) The lamp dims to an unusual level, turn the lamp off using the toggle switch, recheck all connections and then turn the lamp back on. If the problem persists, discontinue use of lamp and contact Cocoweb customer service.

COCOWEB LIMITED WARRANTY:
Cocoweb.com, Inc. warrants its lamps to be made of first class materials, free from defects of material or workmanship under normal use and to perform the service for which they are intended in a reliable and efficient manner when properly installed, for a period of two years from the date of purchase. During the warranty period, Cocoweb.com, Inc. will, at its choice, repair or replace any part or parts which prove to be defective if returned to Cocoweb.com. NOTE: Modification of piano lamp in any way will void the warranty.

⚠ **Danger of suffocation**
Keep children away from packaging

The information in this document is subject to change without notice.
COPYRIGHT © COCOWEB.COM 2015

COCOWEB.COM
3 Corporate Park, Suite 240
Irvine, CA 92606
Phone: 1-888-783-0378

12” LED PIANO DESK LAMP WITH DIMMER (DLED12MBD)
USER MANUAL

WARNING

Make sure the light toggle switch is in the OFF position before plugging in the piano lamp to the wall outlet. Use the toggle switch on the lighting fixture or a properly installed wall switch to toggle the piano lamp ON and OFF. Plugging and unplugging the power adapter to toggle the lamp ON and OFF can drastically reduce the life of the power adapter and may cause it to malfunction.

STEP 1: Plug the adapter connection into the back of the lamp base.
STEP 2: Plug the power adapter into a wall outlet.
STEP 3: Adjust the lamp to the desire height
- To reposition the lamp, release the handle while holding the lamp in place
- Once desired position is achieved tighten the handle making sure it is secure.

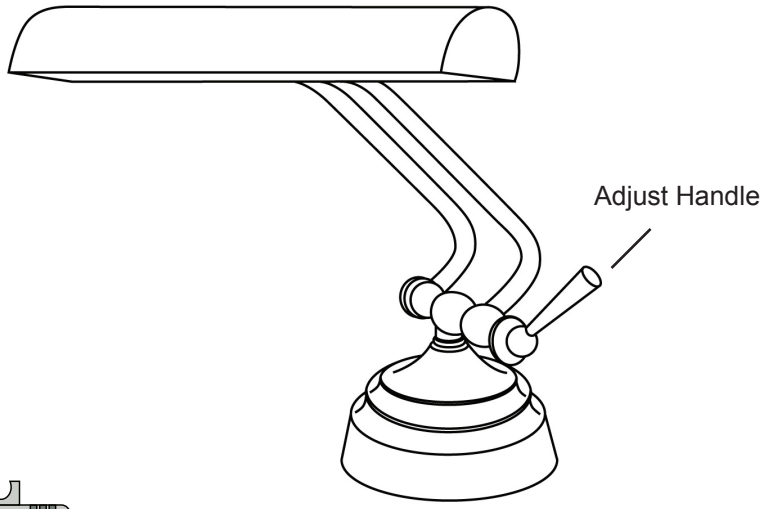

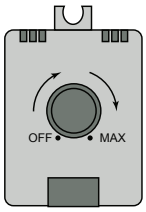

LED Potentiometer Electronic Dimmer

Specifications

FUNCTION	STEPLESS CONTROL
INPUT	24 Volt DC
OUTPUT	MAX 1.5 Amps
SIZE	L 1.5in x D 1¾in x H 2in

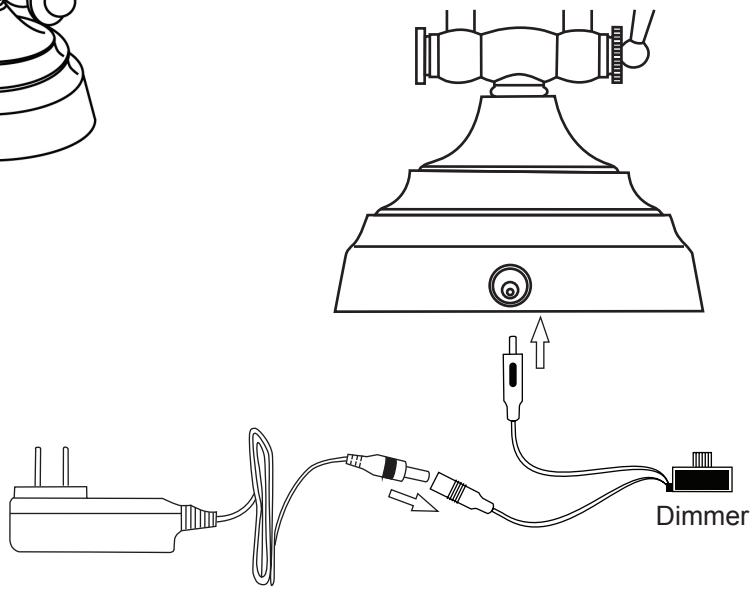

LIGHT CONTROLS

1. The ON/OFF toggle switch is pre-installed on the lamp shade. Simply toggle the toggle switch to turn the lamp on or off.
2. Rotate the dimmer control to increase or decrease light brightness. Rotate counter clockwise until it clicks to turn lamp off.

Note: Piano lamp can be toggled on/off using dimmer or toggle switch. If light is not working, make sure both are in the on position.

The information in this document is subject to change without notice.
COPYRIGHT © COCOWEB.COM 2015

COCOWEB.COM
3 Corporate Park, Suite 240
Irvine, CA 92606
Phone: 1-888-783-0378